

frequently asked questions

H3000 Systems

“How do I find out which software versions my system is running?”

Using a GFD

- (a) Press the **Enter/Menu** key
- (b) Scroll **Down** to Setup and press **Enter**.
- (c) Scroll **Down** to System and press **Enter**.
- (d) Scroll **Down** to System Versions and press **Enter**.
- (e) The System Software versions will be displayed.

Using an FFD

- (a) Perform a ‘software’ power down by pressing and holding the **Lights** key.
- (b) Press and hold the **Enter** key and the **Lights** key simultaneously until the display shows “DIAGNOST”.
- (c) Press the **Enter** key once, the display will show “KEY TEST”.
- (d) Press the **Scroll Down** key repeatedly to scroll through the menu until the display shows “VERSIONS”.
- (e) Press the **Enter** key once to select this function.
- (f) Pressing the **Scroll Up/Down** keys will cycle through the following choices:

| | | |
|----------|---|------------------------------------|
| DISPLAY | - | The FFD you are currently using |
| PILOT | - | Hydra/Hercules Pilot Computer Unit |
| HAL 2000 | - | Halcyon 2000 Compass |
| EXP UNIT | - | Expansion Unit |
| NMEA/232 | - | Hercules Performance Processor |
| WIND | - | Wind Processor |
| DEPTH | - | Depth Processor |

- (g) Press the **Enter** key to select your choice. The display will now reveal the following:

| | | |
|-------------|---|---|
| Top Half | - | System Address Node; e.g. 0060 is node 60 |
| Bottom Half | - | Software Version; e.g. 4884 is version 84, i.e. the last two digits |

- (h) Press the **Page** key 3 times to exit the test mode.

--ends--